

Power Washing your Chromebook

Push 3 buttons ESC/REFRESH/POWER

Screen Says

- Insert usb stick
- Turn OS ver...Off
- Turn OS Ver...Off (2)
- OS verification off
- Let's go
- Wireless

- Updating
- Accept
- Sign in

What you Do

- Ctrl +d
- Enter
- Space
- Enter (reboots, wait)
- Click button
- Use GSDGuest with a password of "learning" at school
- Wait
- Click button
- Your [username@granitesd.org/Password](mailto:username@granitesd.org)
- Click Done
- Next. Enjoy

If it does not say managed by GSD or it says you are the owner...START OVER